



Pre-Installation of IRST(RAID) or storage Driver Using the F6 Method

1. Extract all IRST/Storage drivers which you prepared to a CD/DVD or a USB device.
2. During the installation of Windows, please select the disk to install Windows and click [Load Driver] to install your third party drivers.


Note: The following is demonstration IRST driver.

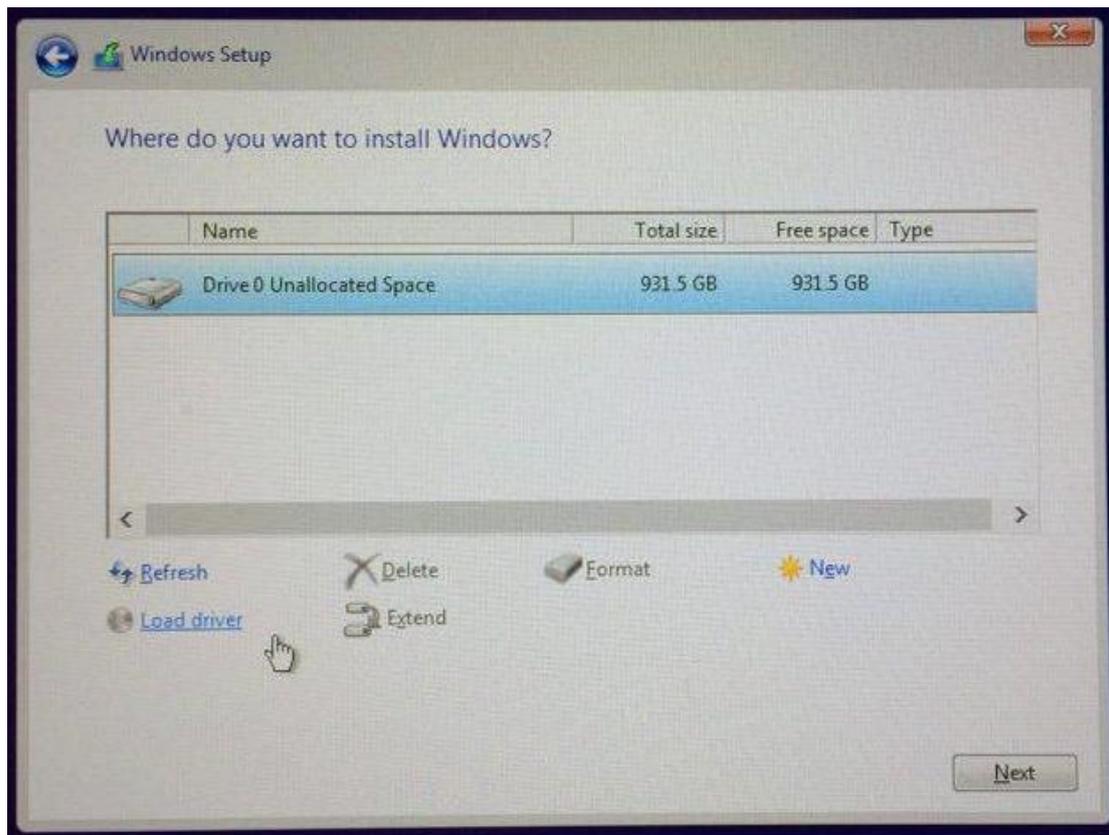


3. Please insert the media (CD/DVD or USB) which you prepared in step 1 when prompted with [Load driver] dialog. Then, select [Browse] to continue.

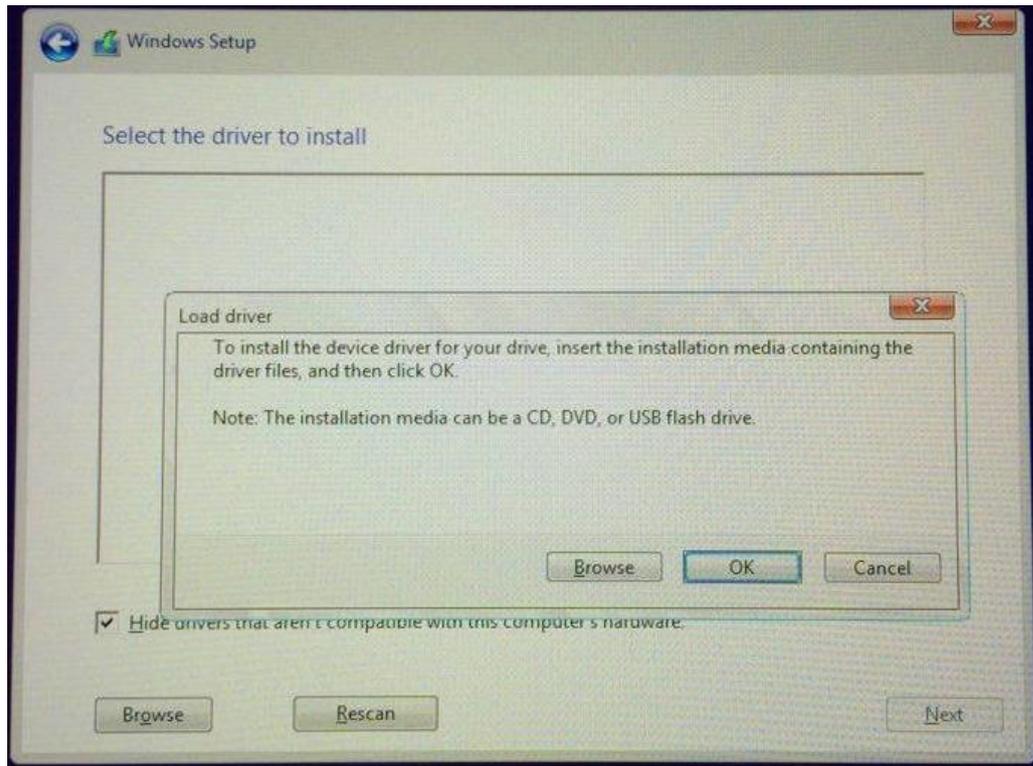

4. Select the media or folder and press [OK]

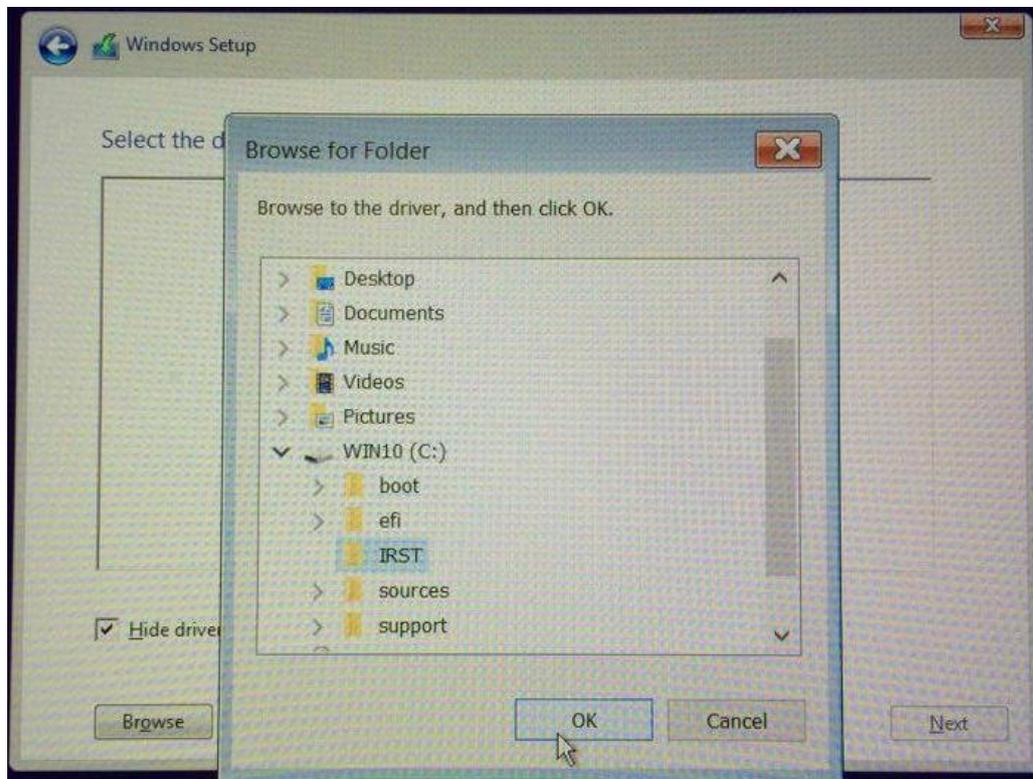

5. Please choose suitable driver for system controllers and press [Next] to continue.

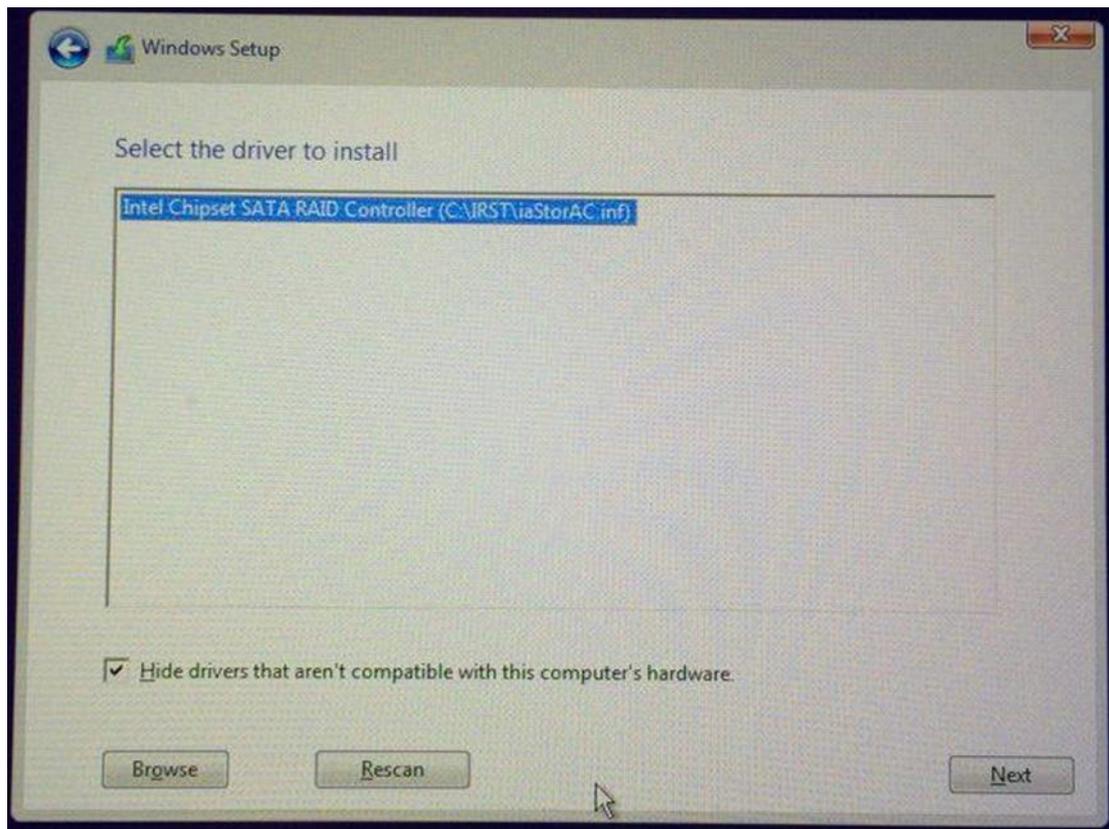

6. If your storage device is ready after driver installation, please continue to complete the process the Windows installation.

