

FAQ No.2016

如何更換 Windows 10 介面之顯示語言?

影響機種: 全

<mark>Q:</mark> 如何更換 Windows 10 介面之顯示語言?

A: 請依下述步驟選擇您喜好之語言。

注意: 如果您的 Windows 系統為 Windows 單一語言版本, 該版本僅包含預設

語言,並法無切換成多國語言。

1) 右鍵點選[Windows 鍵]並選擇控制台。



2) 選擇控制台中的[新增語言]。



Prepared by MSI Notebook FAE Version: 1.1 Date: 2016/01/29

 先檢查語言列表·如果您的Windows系統並無想添加的語言於列表· 請先選擇[新增語言]。

Language			-	
→ × ↑ 🐓 > Control Par	nel 👂 Clock, Language, an	d Region ≯ Language	✓ ひ Search Control Panel	
Control Panel Home	Change your lang	uage preferences		
Advanced settings	Add languages you wa	nt to use to this list. The language at the top of your list is your primary language (the one yo	ou want to see and use most often).	
Change date, time, or number formats	Add a language Ren	ove Move up Move down		
	English (United States)	Windows display language: Enabled Keyboard layout: US Date, time, and number formatting	o	ptions
See also				
Fonts				
Location				

4) 舉例來說,我們將示範為您的微星筆電切換繁體中文語言。

4.1) 選擇主語言選單。

	A Control Danol	Clock Language and Region				Search languages	
	T X Condorrance	Clock, Language, and Region	Language - Add languages	2		• • • Search languages	
Add	d a language						
Use t	the search box to find m	ore languages.					
Grou	ip languages by: Langu	age name					
		1					^
	Catalan	Central Atlas Tamazight (Latin)	Central Atlas Tamazight (Tifinagh)	Central Kurdish	Cherokee (Cherokee)	Chinese (Simplified)	
	中文(繁體)	Corsu	hrvatski	čeština			
	Chinese (Traditional)	Corsican	Croatian	Czech			
D							^
	dansk	درى	<i>وروْر ۵</i> سو	Nederlands	「「」「」「」「」「」」「」」「」」「」」」「」」」「」」」「」」」「」」「」		
	Danish	Dari	Divehi	Dutch	Dzongkha		
E							^ ~
E	Danish	Dari	Divehi	Dutch	Dzongkha		^ v

4.2)接續選擇[開啟]。

→ ∨ ↑ 🐖 > Control Panel	> Clock, Language, and Region 3	· Language > Add language	s		✓ ひ Search languages		
Add a language							
Use the search box to find mo	ore languages.						
Group languages by: Languages	ge name 🛛 🗸						
						^	
català	tamazight n lațlaș		کوردیی ناوه ٍراست	СМА	中文(简体)		
	n wannas						
Catalan	Central Atlas Tamazight (Latin)	Central Atlas Tamazight (Tifinagh)	Central Kurdish	Cherokee (Cherokee)	Chinese (Simplified)		
		(
中文(繁體)	Corsu	hrvatski	čeština				
Chinese (Traditional)	Corsican	Croatian	Czech				
D						~	
					2		
dansk	درى	تِروْرِ ۵ سُ	Nederlands	र्हेट्राय.	2		
						~	

4.3)選擇您的語言。

4.4) 點選[新增]將所選語言加入 WInodws 語言列表。

egional variants	- 0
-> 🕆 🎌 > Control Panel > Clock, Language, and Region > Language > Add languages > Regional variants	✓ ♥ Search regional variants
Add a language	
Use the search box to find more languages.	
中文(香港特別行 政區) 中文(澳門特別行 政區) 中文(台灣)	
Chinese (Enditional Hana Chinese (Enditional Massa Chinese (Enditional Triuma)	
Kong SAR) SAR)	
	1
	4
Privacy statement	Add
Privacy statement	Add Cancel

5) 顯示語言可透過[上移]與[下移]進行調整。在示範中,我們將[中文(台灣)]上移。

턎 Language		-		×
← → × ↑ 🐓 > Control Par	nel 👂 Clock, Language, an	d Region > Language V 💟 Search Control Pa	anel	م ر
Control Panel Home	Change your lang	juage preferences		
Advanced settings	Add languages you wa	nt to use to this list. The language at the top of your list is your primary language (the one you want to see and use most often).		
Change date, time, or number formats	Add a language Ren	nove Move up Move down		
	English (United States)	Windows display language: Enabled Keyboard layout: US Date, time, and number formatting	Options	
	中文(台灣)	Windows display language: Available for download Input method: Microsoft Bopomofo	Options	
See also				
Fonts				
Location				

6) 利用[選項]設定顯示語言與輸入法。

← → ∨ ↑ 🐓 > Control Pan	el 👂 Clock, Language, an	d Region > Language v 🖏 Sea	rch Control Panel	Ą			
Control Panel Home	Change your lang	uage preferences					
Advanced settings	Add languages you wa	nt to use to this list. The language at the top of your list is your primary language (the one you want to see and use	e most often).				
Change date, time, or number formats	Add a language Remove Move up Move down						
	中文(台灣)	Windows display language: Available for download Input method: Microsoft Bopomofo	Options]			
	English (United States)	Windows display language: Enabled Keyboard layout: US Date, time, and number formatting	Options				
See also							
Fonts							
Location							

7) 如果系統並沒有該語言套件,請依下方圖示下載並安裝它。

👷 Language options	-	×
← → ✓ ↑ 🗭 > Control Panel > Clock, Language, and Region > Language > Language options ✓	ប Search Control Panel	٩
Chinese (Traditional, Taiwan)		
Windows display language		
A language pack for Chinese (Traditional, Taiwan) is available for download		
Input method		
Microsoft Bopomofo Options Remove Add an input method Image: Comparison of the second seco		
Save Cancel		

→ 👻 🛧 🐓 > Control Par	nel 👂 Clock, Langua	age, and Region > Language	 V ひ Search Control Panel
Control Panel Home	Change you	r language preferences	
Advanced settings	Add language	Download and Install Updates	× want to see and use most often).
Change date, time, or number ormats	Add a langua	The updates are being downloaded and installed	
	中文(台	Installation status:	Options
		Downloading Chinese Traditional (Taiwan) Language Pack - Windows 10 Version 1511 for x64 -based Systems - (KB3105956) [zh-TW_LP] (update 1 of 1) done! Initializing installation done!	
	English (U States	Installing Chinese Traditional (Taiwan) Language Pack - Windows 10 Version 1511 for x64- based Systems - (KB3109596) [zh-TW_LP] (update 1 of 1)	Options
		Instaling:	
		Cancel	
See also			
onts			

8) 點選[關閉]來完成語言套件安裝。

Language				-	ı ×
—	nel 🔹 Clock, Language, and	d Region > Language		✓ ♥ Search Control Panel	\$
Control Panel Home	Change your lang	uage preferences			
Advanced settings	Add language 🥵 Down	nload and Install Updates	×	want to see and use most often).	
Change date, time, or number formats	Add a langua	Installation complete			
	中文(台			Option	ıs
	English (U			Option	ıs
	States				
			Close		
			Close		
See also					
Fonts					

9) 請記得登出來讓新介面設定生效,新 Windows 顯示語言將會於下次

登入時被裝載。

anguage			- 0	
→ ∨ ↑ 햝 > Control Pan	el 👂 Clock, Language, and	d Region > Language	✓ ♥ Search Control Panel	
Control Panel Home	Change your lang	uage preferences		
Advanced settings	Add languages you war	nt to use to this list. The language at the top of your list is your primary language (the one you wa	nt to see and use most often).	
Change date, time, or number formats	Add a language Rem	nove Move up Move down		
	中文(台灣)	Windows display language: Will be enabled on next sign-in Input method: Microsoft Bopomofo Date, time, and number formatting	Options	
	English (United States)	Windows display language: Enabled Keyboard layout: US	Options	
iee also				
Fonts				
Location				

9.1)於[Windows 鍵]上點擊滑鼠左鍵。

9.2) 點擊您的個人帳戶。

9.3)選擇[登出]系統。

Recycle Bin										
MSI Afterburner	∳FLang ← -	guage → · · ↑ 🗭 · Co ntrol Panel Home	ntrol Panel > Clo Char	ck, Language, and Reg 1ge your languag	ion > Language e preferences			✓ Ů Search Control Par	× □ ••	
MSLPC Change account settings Lock	Adv	Life ² glance	Add Ia Get all yo	ur mail in one	Play and explore	onuage at the topy	of your list is your orige	y language (the one you want to see and use most often).	Options	
Sign out 2 地園 諸 違絡人		Cagdar Ce Microsoft Edge	Mail	Search	Abox	Groove Music	Movies & TV		Options	
Paint 小算盤 Recently added Optional Features		Mostly Cloudy 45° 46° 22° Washington			Why a Russian Saudi deal on cutting oil output remain Money	One dead as Oregon occu and others News	FBI arrests pation leader			
同 File Explorer ② Settings		Store	Skype video	SODA		OneNote	Get Office			
 Power All apps I'm Cortana. Ask me 	New e anything			2 6			øj 💻		^ %	● 行 4× ■ ENG ^{下午 02-29} 2016/1/27

10) 於再次登入後, Windows 介面語言將會套用新設定。

