

FAQ No. 01438**Multi-display**

Affected Model: All Models

Q: How to setup Multi-display with Extend/Duplicate Mode?**A:** Please follow the steps below to configure the Multi-display.

- I. After you connect the laptop to external monitors, press the combination key,


Windows Logo key  and “P” together to switch display mode to “Extend” or “Duplicate” mode. Then you can start to work with multi-displays at the same time. (For some old models, please use the combination key “Fn+F2” to switch the display mode.)



- II. If any of your external monitors doesn't light up, please go to the NVIDIA Control Panel:



- III. Go to Set PhysX Configuration and check if all connected displays are detected:

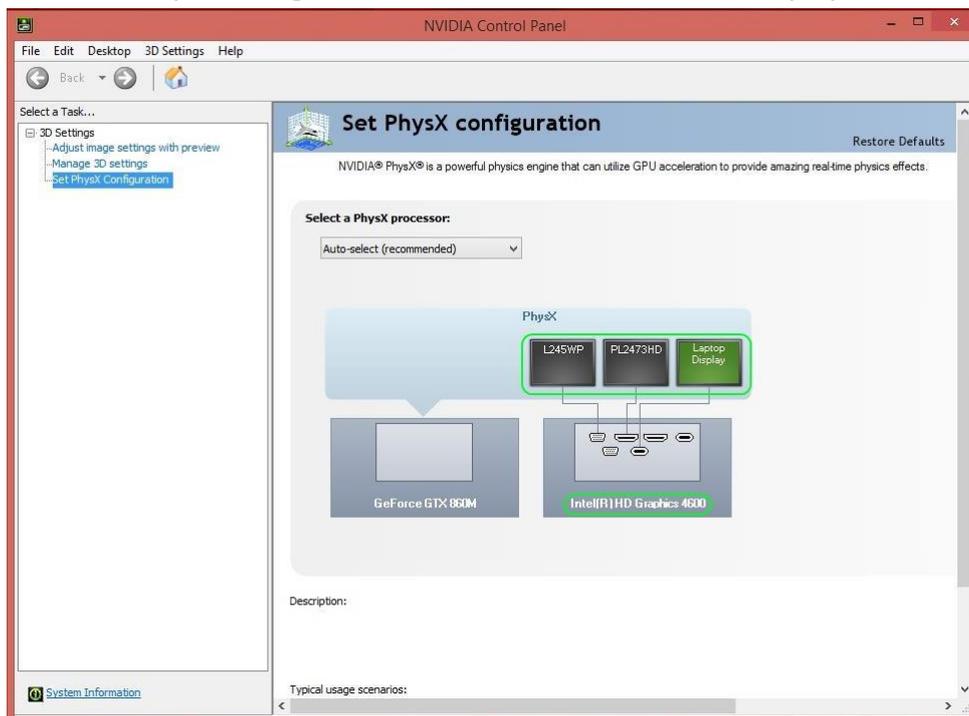


*Please Note that the displays are connected to the Intel Integrated Graphics, so you'll need to use the Intel Graphics Control Panel to make Display adjustments.


- IV. Go to Intel Graphics Control Panel by right click on the desktop and select "Graphics Properties..."




V. Click Display.

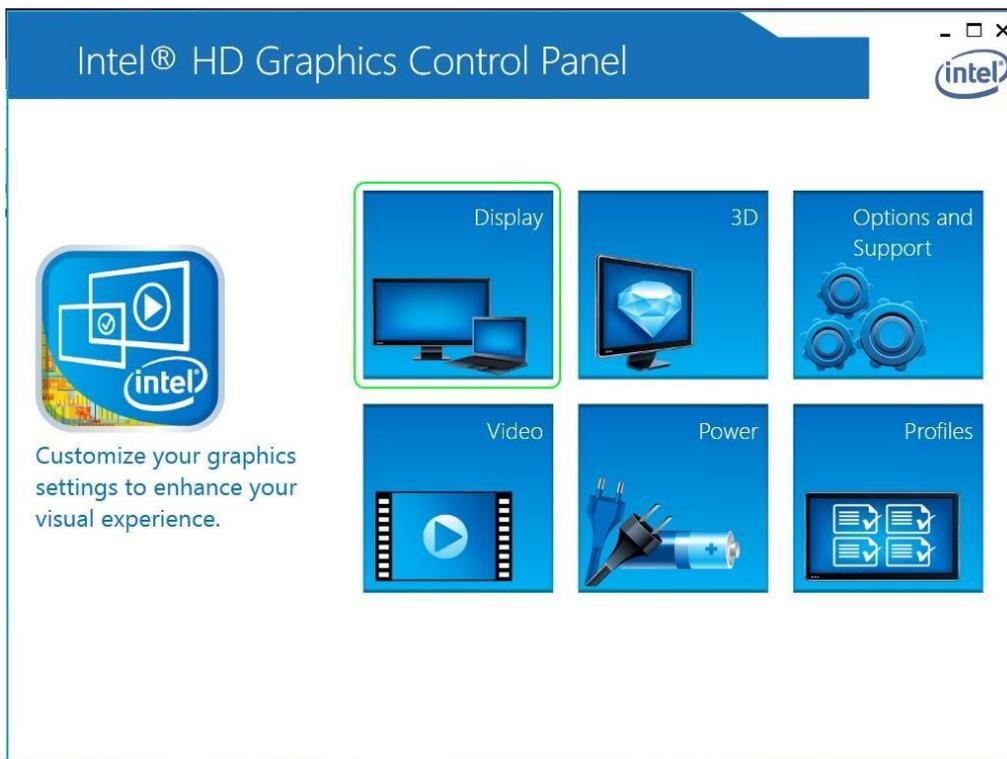

VI. Click Multiple Displays.

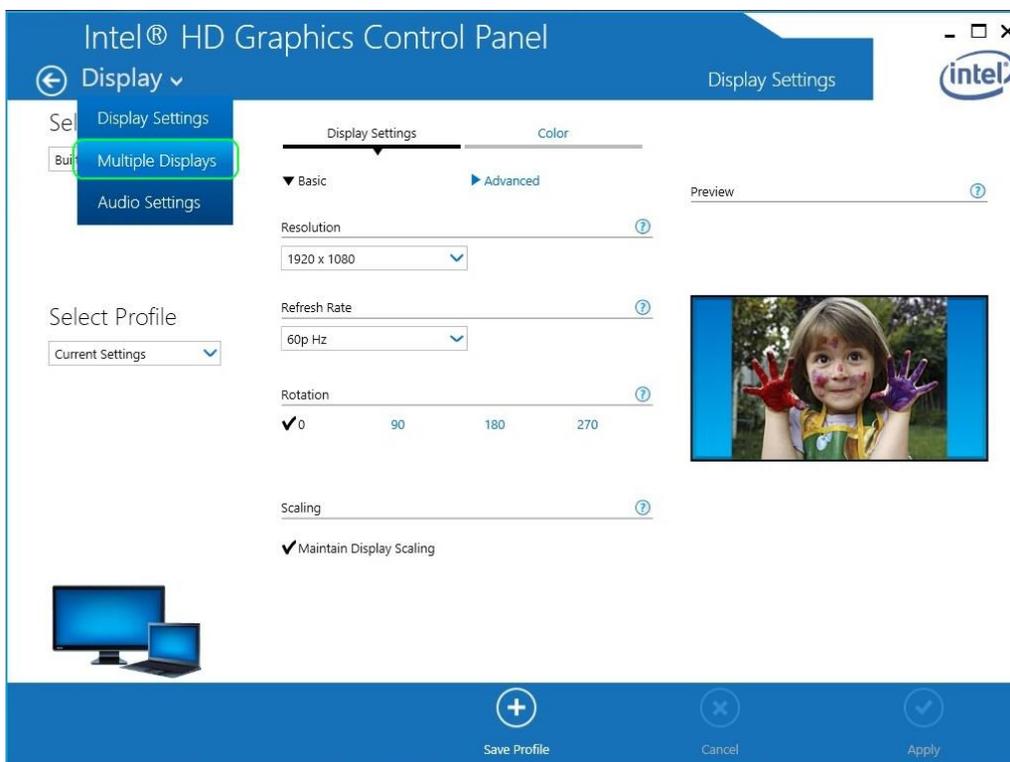


VII. Add and detect your external monitors in the setting of Extended Desktop (or Clone Displays).

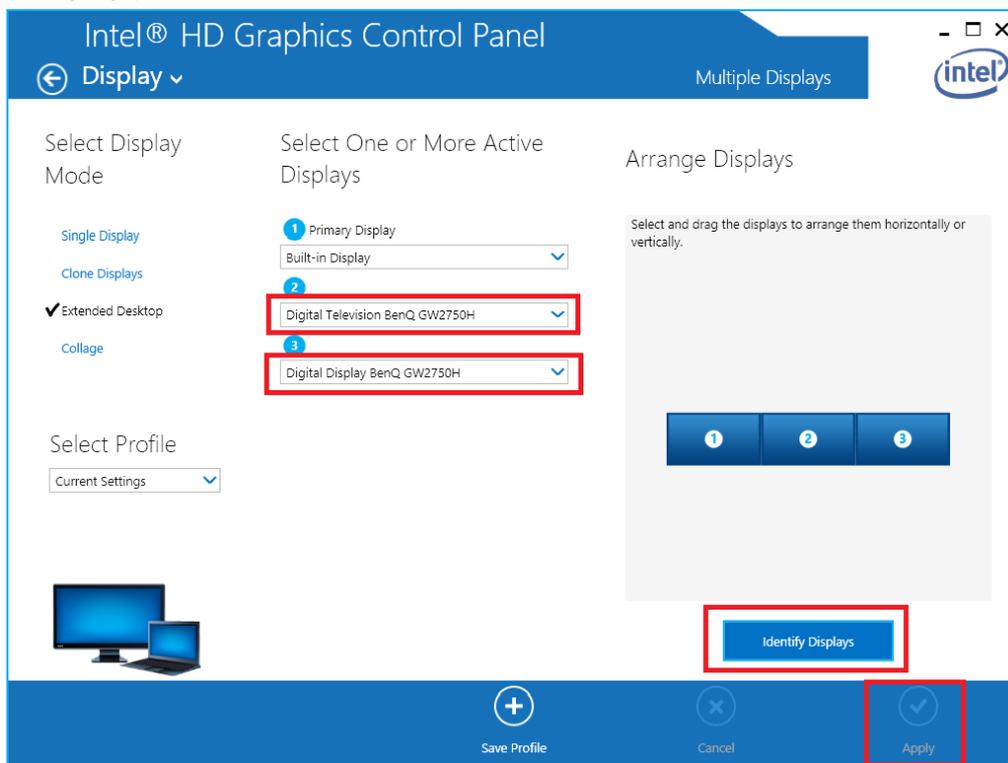

Extra Tip:

For extra convenience save your Multi-display Setup in a Profile:

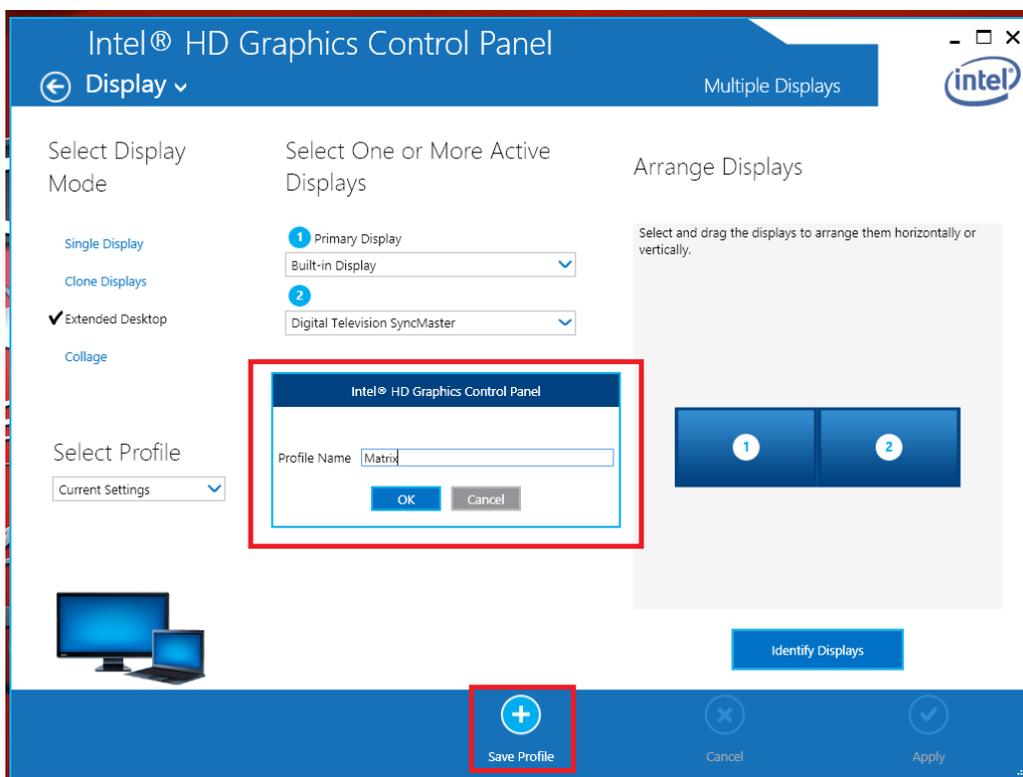

You can easily select this profile from the desktop when needed:

