


*msi*<sup>TM</sup>

# How to switch UEFI and Legacy in PC

# Instructions



1. Boot up PC BIOS or UEFI mode in PC.
2. Then **Enable (UEFI) / Disable (Legacy)** Windows Logo in BIOS (UEFI) mode.
3. Save the configuration & Restart PC.

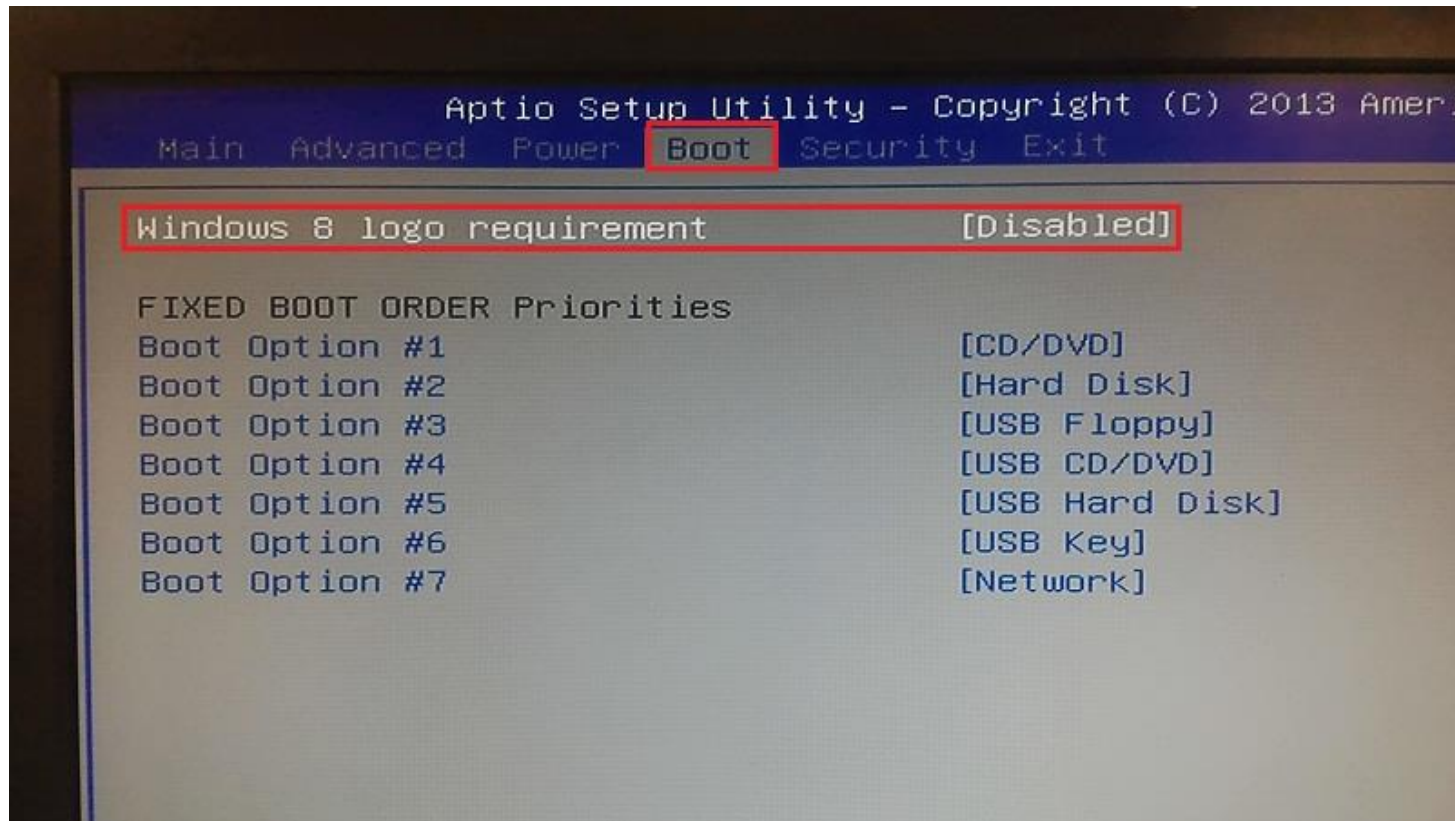

**P.S.** Each PC may have **different GUI to display BIOS page**, but the main function to switch UEFI/Legacy are related to Windows Log context. You can check the picture in next chapter.

# For Gaming model BIOS GUI



**msi CLICK BIOS 5** EZ Mode (F7) F12

14:20 Mon 6 Jun, 2016

**GAME BOOST** ON

**TEMP**  
CPU Temp **49°C**  
Motherboard Temp **47°C**

**CPU Speed 4.20 GHz**  
**DDR Speed 2133 MHz**

MB: MS-B106  
CPU: Intel(R) Core(TM) i7-6700K CPU @ 4.00GHz  
Memory Size: 16384MB  
VCore: 1.168V

BIOS Ver: EB106IMS.A00  
BIOS Build Date: 05/05/2016

**Boot Priority**

Settings\Advanced\Windows OS Configuration

Windows 8.1/10 WHQL Support	[Enabled]
MSI Fast Boot	[Disabled]
Fast Boot	[Enabled]

- > Internal GOP Configuration
- > Secure Boot

**SETTINGS**

Monitoring and fan control  
**HARDWARE MONITOR**


Display system information  
**SYSTEM EXPLORER**

**HELP** **INFO**

Enables the supports for Windows 8.1/10 or disables for other operating systems.

↑↓↔: Move  
Enter: Select  
+/-: Value  
ESC: Exit  
F1: General Help

# For Business Model BIOS GUI

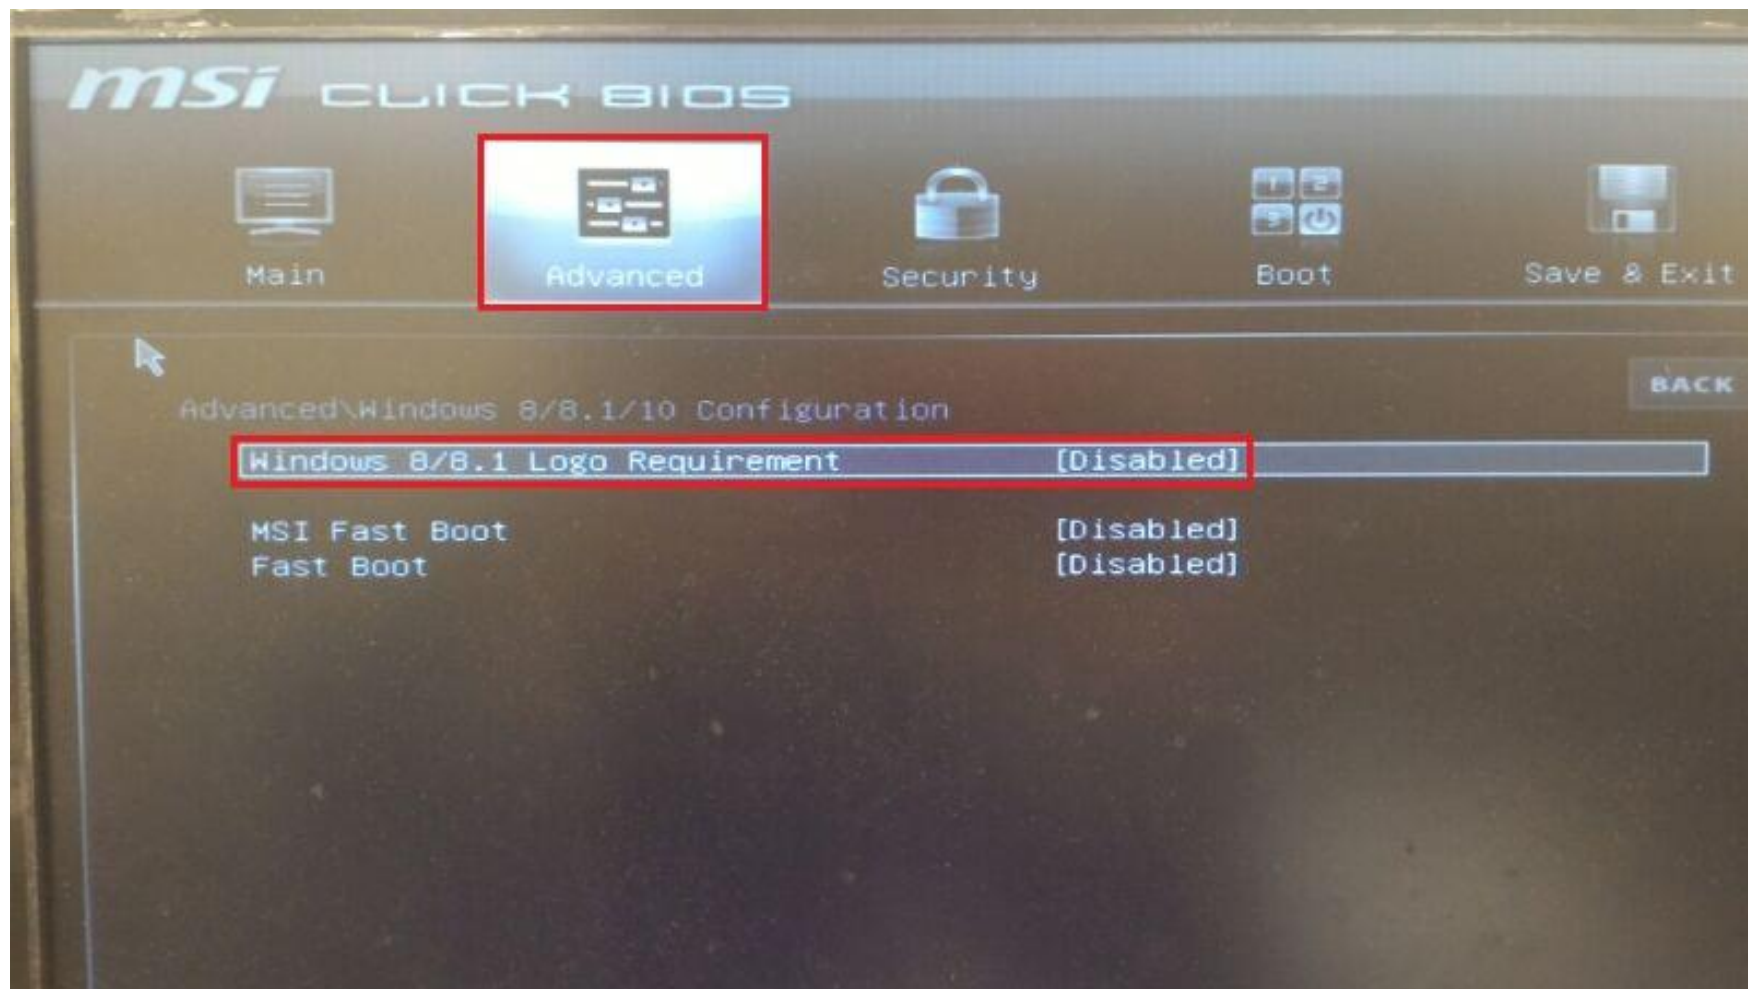

**Thanks for  
your attention**

***msi***<sup>™</sup>